ASUS®

MB169B+

Q41G78S168091A

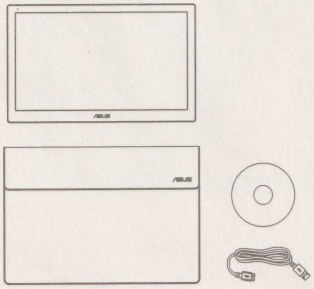

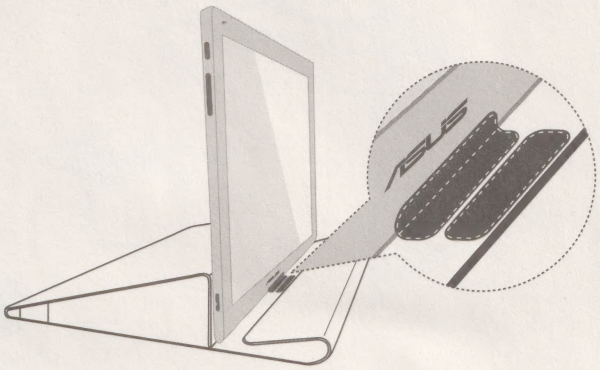

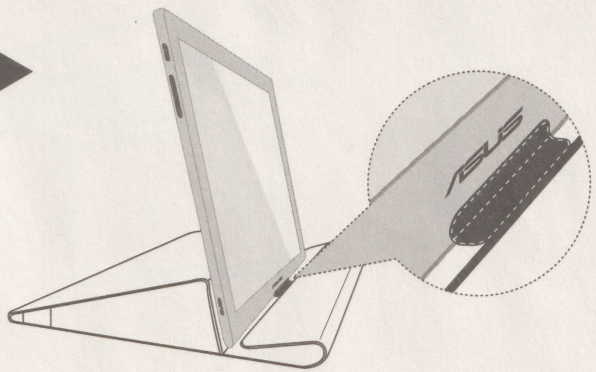

1

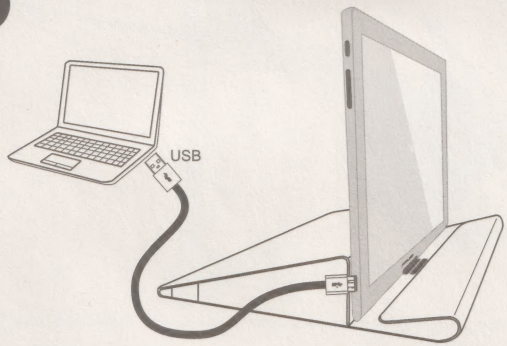
USB

2

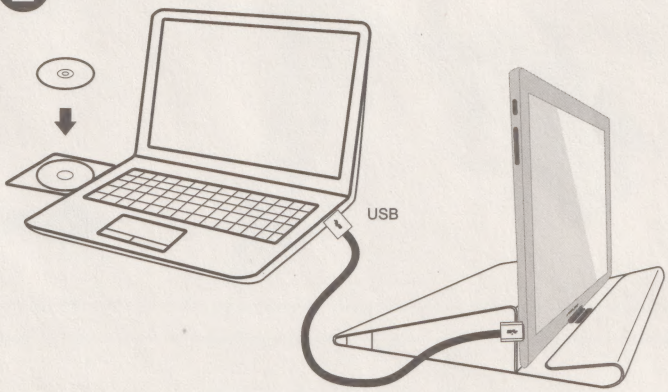
USB

3

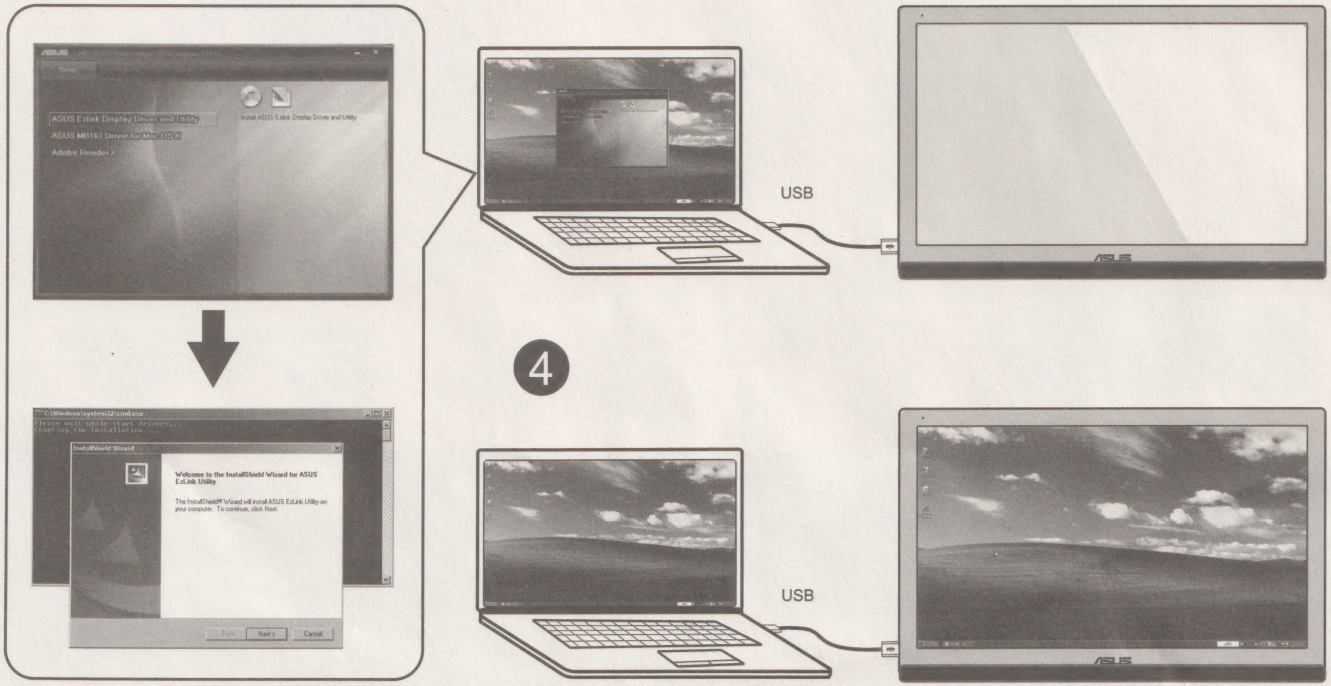
ASUS Ezlink Display Driver and Utility
Install ASUS Ezlink Display Driver and Utility
Adobe Reader X
USB
InstallShield Wizard
Welcome to the InstallShield Wizard for ASUS EzLink Utility
The InstallShield® Wizard will install ASUS EzLink Utility on your computer. To continue, click Next.
Next >
Cancel
4
USB